



Enjoy. Breathe. Feel good.


LOGO INSTALLATION GUIDE

1. Using the pre-installation form, determine the exact height of either the top or bottom of the logo (whichever measurement is provided). Then, measure the distance from the chosen reference point (e.g., millwork, wall, window, etc.) to the edge of the logo. Mark both measurements on the wall where the installation will take place.




2. Take the paper logo template and carefully cut notches at the two reference points identified in Step 1. These notches will allow you to see the measurement marks on the wall through the template, making it easier to align the logo accurately before installation.

3. Using a level and painter's tape, carefully secure the paper template to the wall, aligning it with the reference marks made in the previous step. Use a minimum 3 ft (0.9 m) level to ensure the template is perfectly level, especially for longer horizontal installations, to improve accuracy and minimize measurement errors.

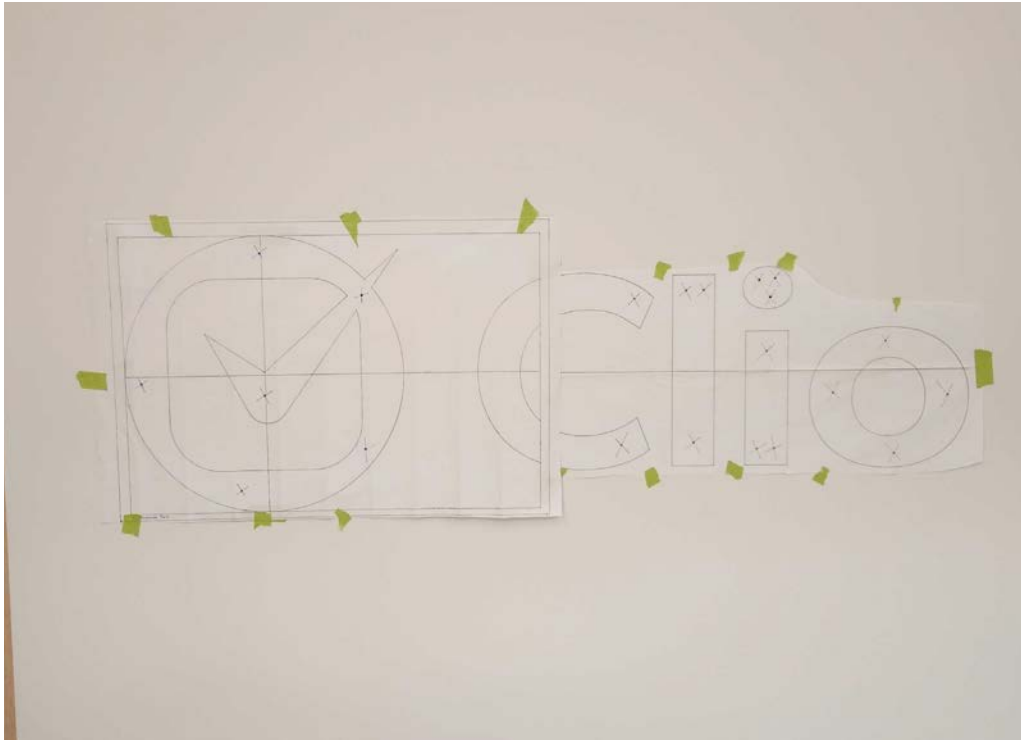

4. Drill holes at each designated location through the paper template. Before removing the template, verify that every marked hole has been drilled, as each one corresponds to a mounting point on the logo.

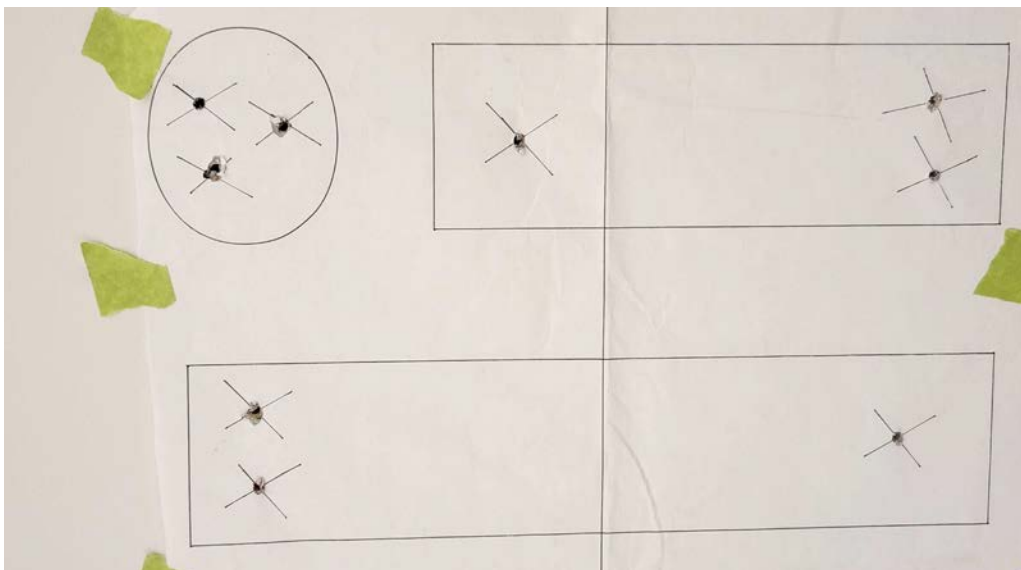

5. Carefully remove the paper template from the wall, taking care not to damage or remove any paint during the process.
6. Using a rubber mallet, insert drywall plugs into the wall if they are included with the installation hardware.



7. Begin installing the logo using only the hardware provided. If the logo includes multiple paper templates, repeat Steps 1–6 for each template before completing the installation.





ByNature Import Inc

1.855.436.2919

info@bynaturedesign.com

www.bynaturedesign.com



*Vancouver - Calgary - Toronto - Montreal - Quebec (City) - New York
Canada - USA - Europe*

