

The page is framed by various green plant illustrations. In the top left is a large, detailed fern frond. In the top right are several ginkgo leaves. In the bottom left and bottom center are more fern fronds and leafy branches. In the bottom right is another fern frond. The central text is surrounded by these natural elements.

[BYNATURE]

Enjoy. Breathe. Feel good.

INSTALLATION GUIDE

Pole Moss wall

Installation steps

1. Bring in material and lay down a groundsheet at the base of the wall.



2. Mark spots on the wall according to plan for the exact location/layout of signage.




3. Put up signage and use screws to fasten in place while watching the level to ensure it is perfect.




4. Use more screws to fasten moss panels, according to plan, on the wall. Make sure it is tight to the edges where possible and use as many fasteners as you need so that it is secure.



5. Finish installing all the moss panels, trim the edges so the panels fit flush together and tight to the edges of the frame.

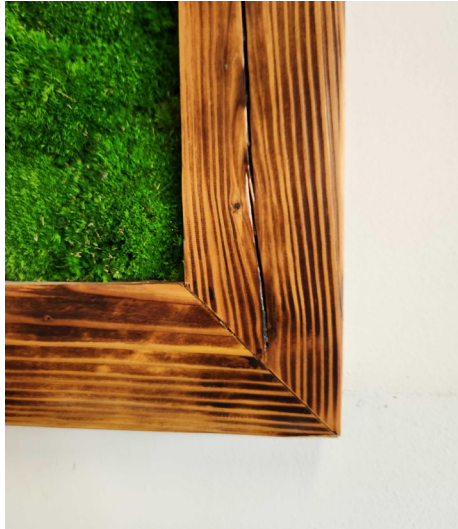


6. Using adjacent type of pole moss and hot glue, fill in the gaps between the panels. Start with the biggest pieces possible, this will ensure the best 'seamless' finished look. Continue filling gaps with moss and hot glue according to existing pieces and panel layout.

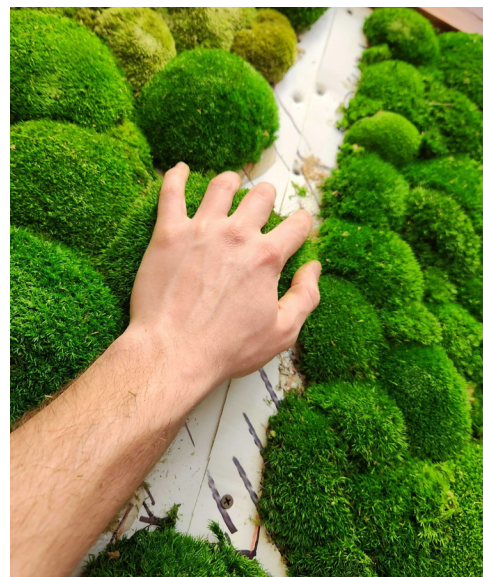

7. Make sure to fill all gaps small and large so none of the backing material is exposed. Its best at this stage to go slow and be thorough to ensure the best looking finished product. As well, you can scrape/cut the bottom of the pole moss pieces to match the height of the existing moss on the panels.




8. Once all the gaps are full, use a light source to carefully examine and remove dust, debris, glue strands, etc. This process is incredibly important, please be thorough and clean the moss feature and surrounding area as best as possible.

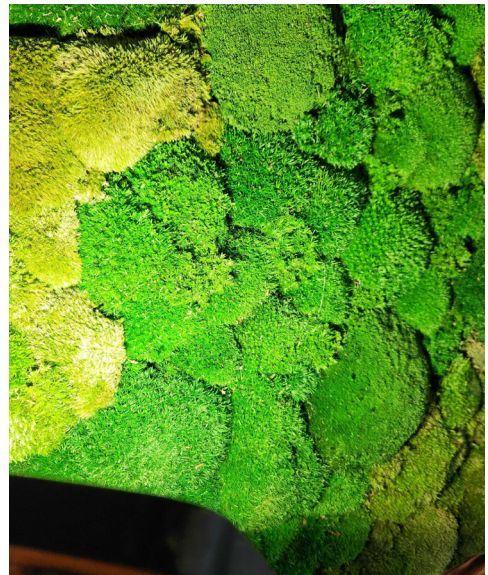

9. Using an air duster/vacuum clean the remaining dust/debris off the wall feature. The main goal is to remove beige/brown dust so the moss really stands out.



10. Clean the exterior of the frame with a towel or disinfectant wipe to ensure there is no leftover debris and fingerprints. Sweep the floor, pack the tools and empty boxes away, then take tons of pictures.

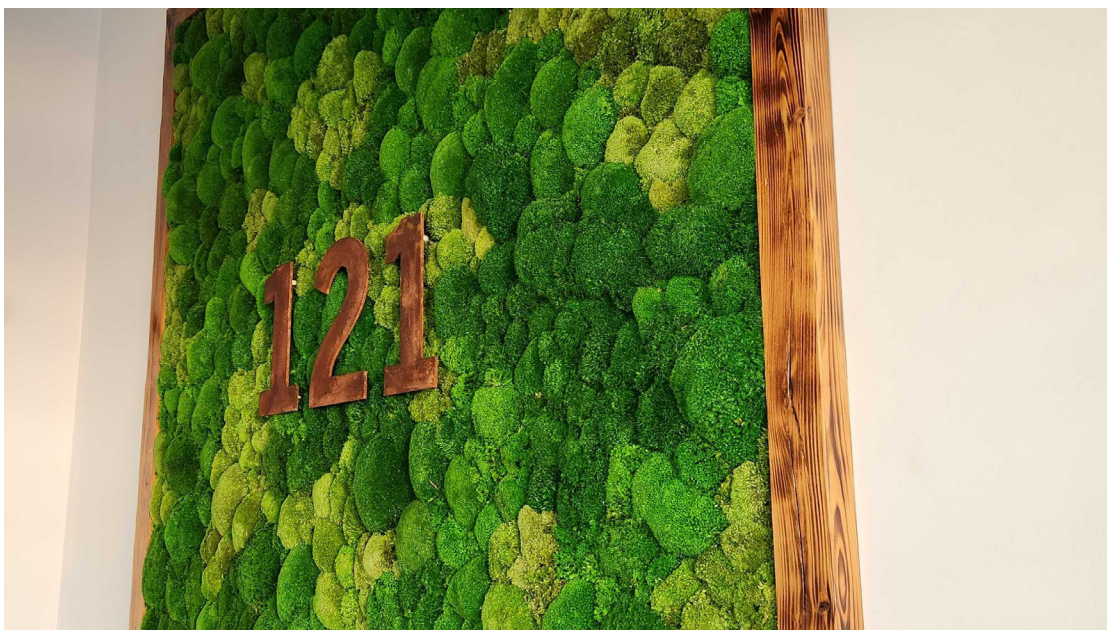

11. Get the client to sign the installation waiver. All done, drive safe!





ByNature Import Inc

1.855.436.2919

info@bynaturedesign.com

www.bynaturedesign.com



*Vancouver - Calgary - Toronto - Montreal - Quebec (City) - New York
Canada - USA - Europe*