

The page is decorated with various green plant illustrations in the corners. Top-left: a large, detailed fern frond. Top-center: a sprig of moss or small-leafed plant. Top-right: a branch with rounded, scale-like leaves. Bottom-left: a branch with rounded, scale-like leaves. Bottom-center: a sprig of moss or small-leafed plant. Bottom-right: a fern frond and a branch with rounded, scale-like leaves.

[BYNATURE]


Enjoy. Breathe. Feel good.

INSTALLATION GUIDE


Reindeer moss

Reindeer Panels

Our Mossart panels are made using 100% natural preserved moss and plants. Preserved products are no longer living and do not require and maintenance, rimming nor watering.

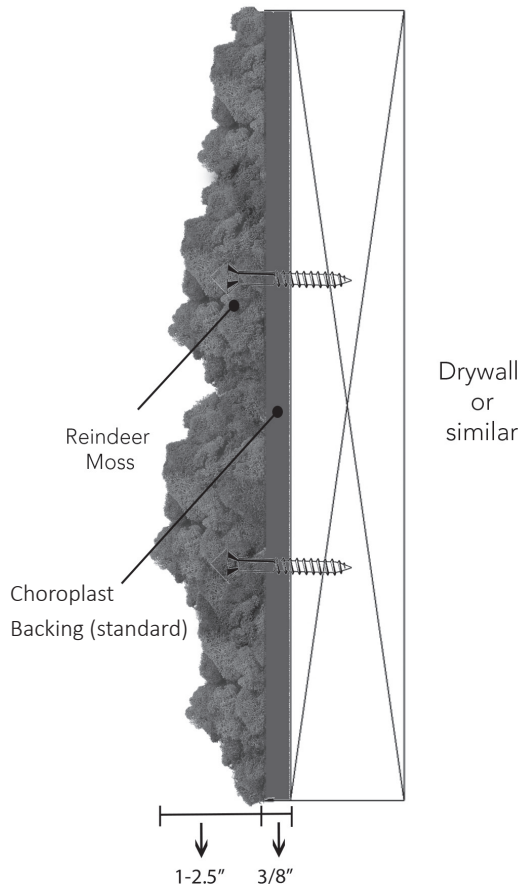

- >> Air humidity should be above 30% (may dry under 30%)
- >> No maintenance, no water, and no light required
- >> Never spray or water the moss and avoid direct sunlight
- >> Natural texture is preserved and long lasting (please ask for life expectancy of individual plants; 5-10 years)

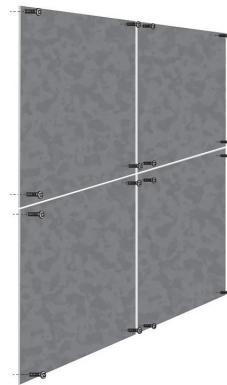

PANEL INSTALLATION

- >> Pre-made panels
- >> Screw or staple panels in place
- >> Custom sizes and shapes
- >> Optional mossart edge for seamless look

BACKING OPTIONS



Coroplast
(Aquilux)



Wood



Eco Felt



Cork

STANDARD PANEL SIZES



60" x 36"



36" x 36"



12" x 36"



12" x 12"

Installation steps

1. Compare your elevation plan with the size of the wall you are installing to ensure measurements are correct.




2. Start by installing one section of your wall. If using screws, begin by using drywall screws (or the appropriate fastener) and a drill to adhere your first panel to the wall. The screw head/staple should travel through the moss and stop at the Coroplast.



3. Following your elevation plan, continue installing panels onto the wall.

4.

When placing a panel beside or on top of one that is already installed, remember to pull back any extra moss that might be in the way so that the panels fit snugly together.

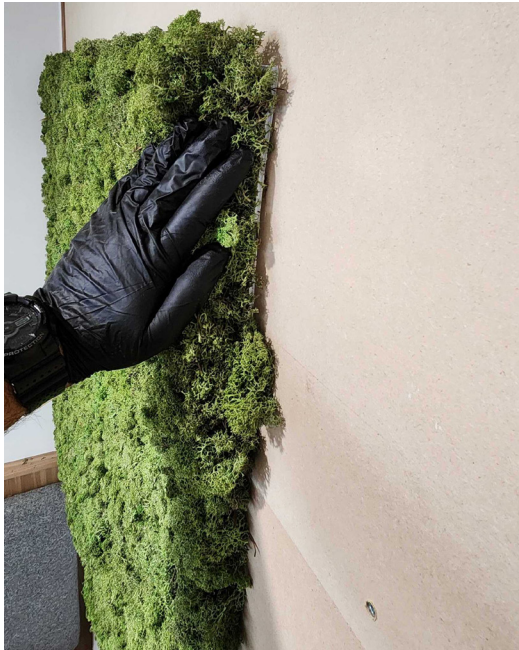

5.

If the provided measurements were incorrect, you might have too much material to fit the wall. If that's the case, you will need to measure and cut away any extra material for your panels to fit properly. This can be done by measuring and marking a line with a straight edge and then carefully using a box cutter / sharp blade to cut along the back side of the panel and through the moss.

6.

Once you have finished installing all the panels onto the wall, you will notice there are seams showing between each panel.



7. You have multiple options and techniques to hide the seams, depending on how the reindeer moss panels look like



OPTION 1


Put some hot glue in between the panels where the seams are visible and push the reindeer from each border of the panels to gather them together and hide the lines.



OPTION 2

Take some reindeer from the boxes of extras you have with you and glue some heads where the seams are visible.

Of course, options 1 and 2 can be combined together.

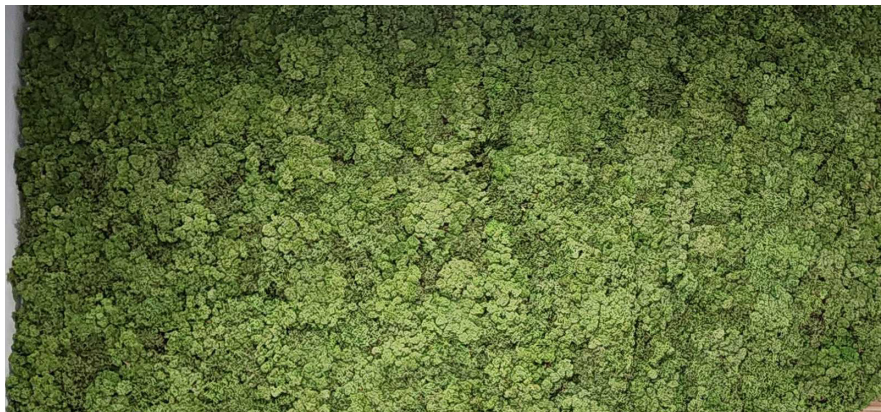

8. As you fix the seams, it's a good idea to press on the panels and check for any loose spots. You can add more screws to any areas where the panels aren't tightly secured to the wall.

9. Any dye that rubs off onto walls/other surfaces can easily be wiped away with a damp cloth.

10. Keep hiding all the seams, and your installation will be complete!





ByNature Import Inc

1.855.436.2919

info@bynaturedesign.com

www.bynaturedesign.com



*Vancouver - Calgary - Toronto - Montreal - Quebec (City) - New York
Canada - USA - Europe*