


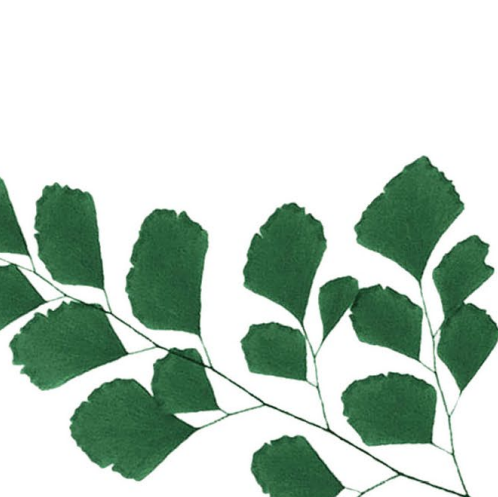

[BYNATURE]

Enjoy. Breathe. Feel good.

PAPIERFLORA INSTALLATION GUIDE



TOOLS

- Glue brush
- Wallcovering adhesive (low VOC recommended)
- Laser (for alignment)
- Knife / utility knife
- Vinyl brush / smoothing brush
- Plastic seam rollers
- Trim guides
- Ladder
- Broom / brush
- Sponge / soft cloth (for cleaning excess glue and bubbles)
- Buckets with water (for cleaning tools and lightly moistening wallpaper if needed)
- Measuring tape / ruler (for precise cuts)
- Pencil / marking tool (for discreet marks)
- Smoothing tool / wallpaper squeegee (for removing large bubbles)
- Protective gloves (optional, to keep hands clean)
- Drop cloth / plastic sheet (to protect floors and furniture)

1. Clean and smooth the wall, making sure it is free of dust, grease, or imperfections.



2. Measure the height of the wall and cut strips of wallpaper with an additional margin (1 to 2 inches) for precise adjustment.




3. Apply the glue either on the wall or directly on the paper, depending on the type of wallpaper. Use a brush or roller to spread the adhesive evenly.



4. Carefully aligns the first strip with a vertical reference line (you can use a laser level). Hold it at the top and gradually lower it, smoothing with a firm plastic or rubber roller to remove bubbles and wrinkles.



5. After placing the first wallpaper strip, leave about a 1-inch overlap when installing the second strip over the first. Using the laser line as a guide, trim the excess with the trim guide.

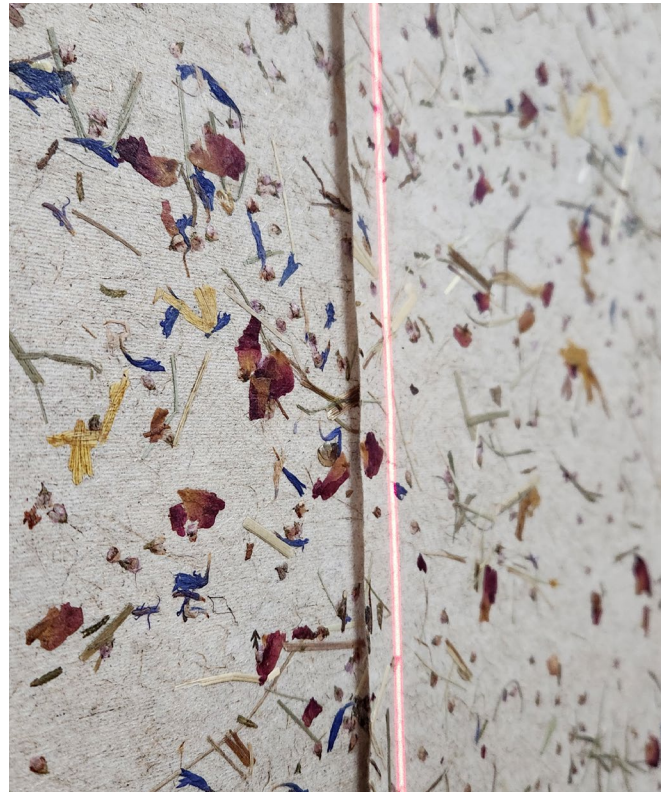

6. Roll over the seam with the plastic seam roller to secure the edges.



7. Once all strips are placed, trim the excess at edges, corners, and near the ceiling, then roll over the edges with the firm roller.

8. Check the seams and edges; clean any visible adhesive with a damp cloth. Make sure everything is well adhered and even.





ByNature Import Inc

1.855.436.2919

info@bynaturedesign.com

www.bynaturedesign.com



*Vancouver - Calgary - Toronto - Montreal - Quebec (City) - New York
Canada - USA - Europe*