


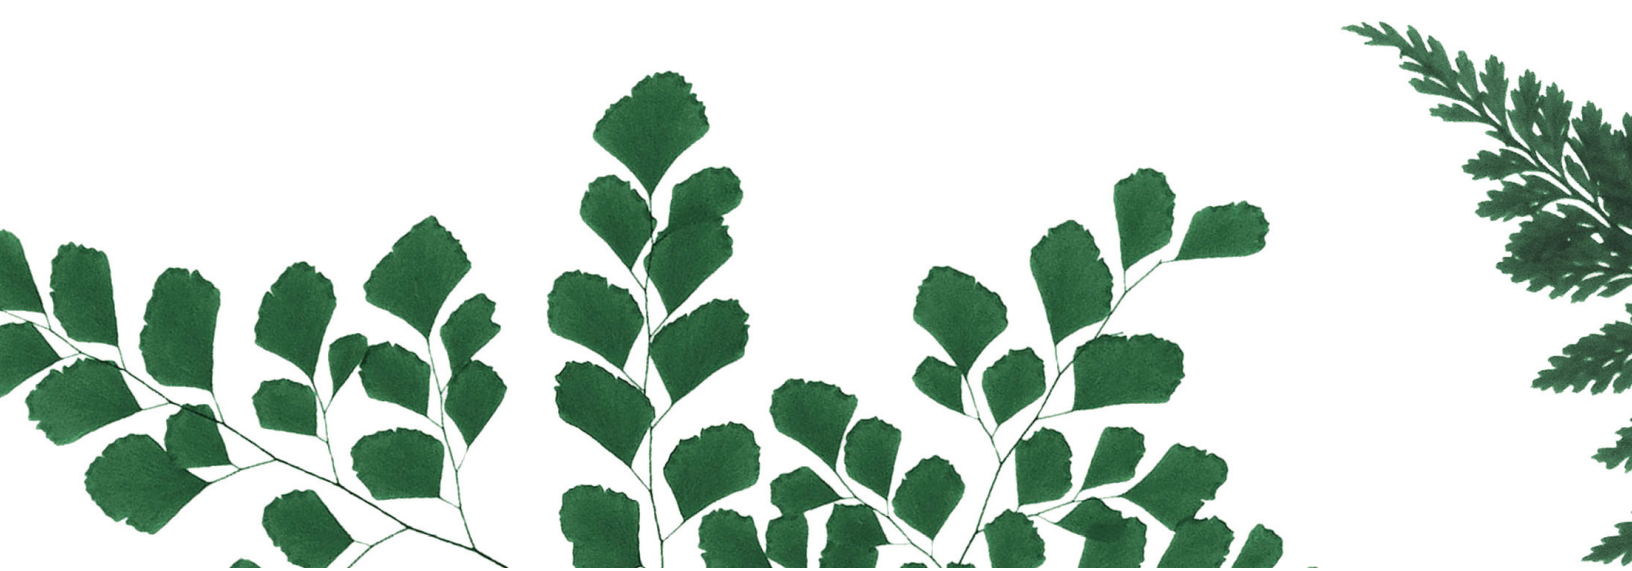

[BYNATURE]

Enjoy. Breathe. Feel good.

FAUX PLANTS INSERTS INSTALLATION GUIDE





1. Compare your elevation plan to the size of the planter you are installing to ensure measurements are correct.

2. Verify the height of the project before installation. Ensure that the combined height of the legs and the panel does NOT exceed the height of the planter.

3. Install the legs, add glue to the top of the legs, and then insert the panels.



4. Press the excess moss on the edges of the panel into the planter using your fingers or a wooden spatula. Make sure all the edges look clean and are inside the planter.

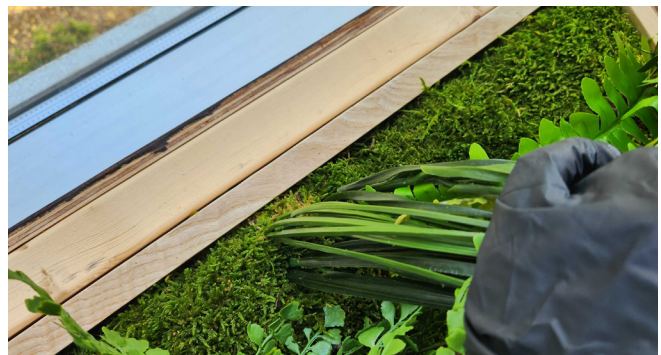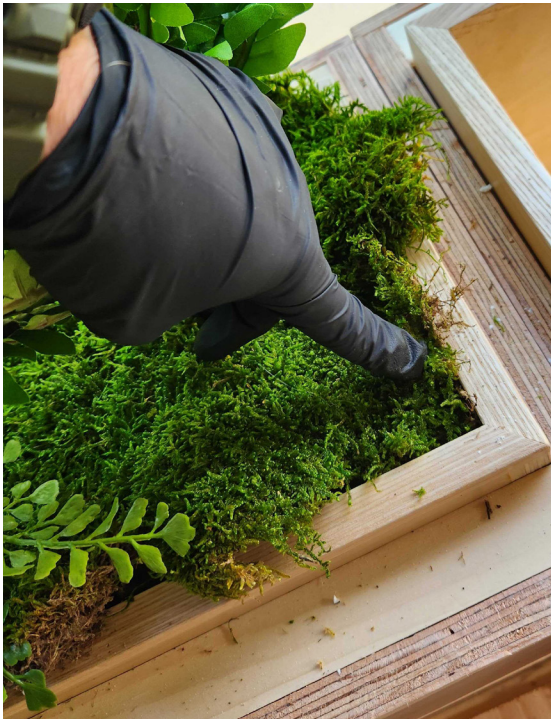

5. If the planter requires 2 or more panels, join the edges of the panels and add glue or extra moss so that it looks like a single piece.



6. Check that all the plants are securely attached to the panel, or add extra glue if needed.



7. Spread out the leaves of the plants to make them look natural.





Do you have a question?
Contact us!

1.855.436.2919

info@bynaturedesign.ca
bynaturedesign.ca

